


## CUSTOM BILLET ALUMINUM LOCKING FUEL DOOR FOR THE HUMMER H2

**IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180**

**Tools Needed:** 7mm and 15mm Socket with Extensions

**Time to install:** Approx. 30 Minutes

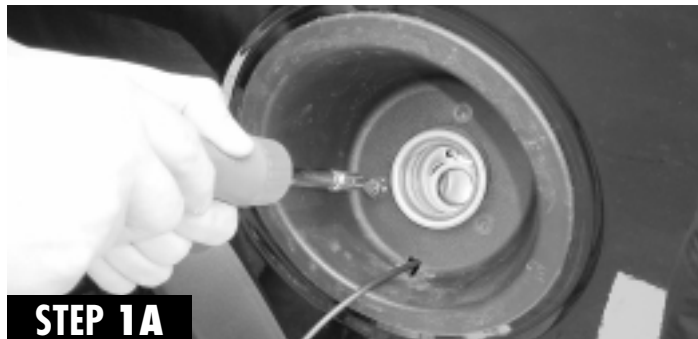



### STEP 1. Removing Plastic Factory Fuel Insert Bezel


Using a 7mm socket remove the 3 screws that hold the plastic fuel insert bezel in place around the fuel fill flange. (See Step 1A.) Next push against the bezel area and turn counter clockwise to remove the plastic insert piece from the 3 slots in the body of the H2. (See Step 1B and 1C.)

### STEP 2. Installing the billet fuel door onto the plastic factory insert bezel.

Begin by removing the plastic fuel cap cord from the insert bezel. (See Step 2A.) Then line up the opening where you removed the plastic fuel cap cord with the notch mark on the billet fuel door surround. (See Step 2B.) Then at the same time slid the plastic insert bezel under the two projection areas around the edge of the billet surround piece. (See Step 2C.) Continue pushing until the plastic insert bezel is completely pushed into the billet surround piece. See 2c.

**Note:** Make sure the plastic insert bezel is still lined up with the mark on the billet surround piece. If not you can rotate the plastic insert bezel a little so that it lines up. Next install the two phillips head screws. (See Step 2D.)

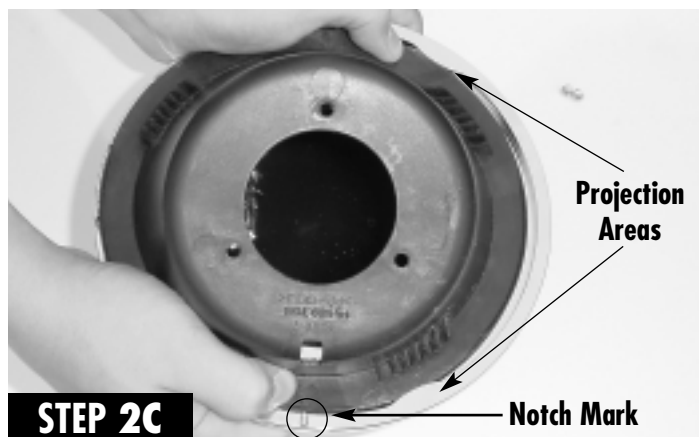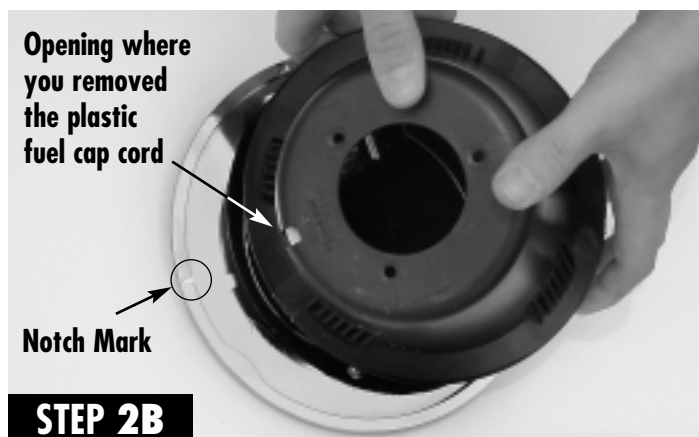

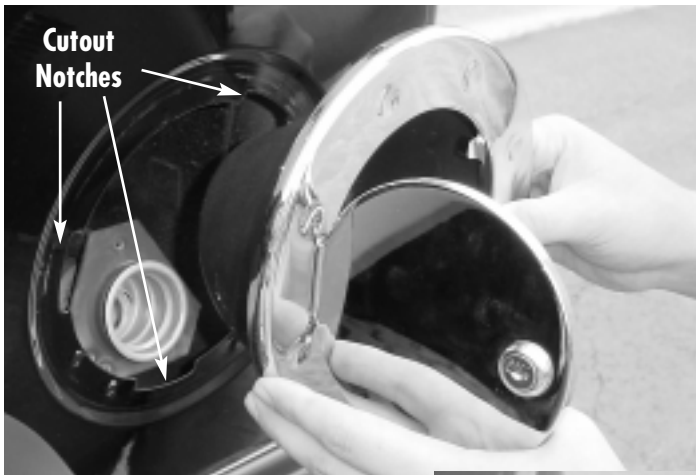

**STEP 3A**

**STEP 3.** Installing the assembled billet fuel door and insert bezel back onto the H2.

Line up the 3 raised up areas on the backside of the plastic insert bezel with the 3 cutout notches on the body of the H2. (See Step 3A and 3B.) Then push and turn the whole assembly clockwise until it stops. (See Step 3C.) Next re-install the 3 screws and the plastic fuel cap cord. (See Step 3D and 3E.)



**STEP 3B**



**STEP 3C**



**STEP 3D**



**STEP 3E**

**STEP 4.** Close and lock door and your finished. (See Step 4)



**STEP 4**



**REALWHEELS COVER COMPANY, INC.**

3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • [www.realwheelsacc.com](http://www.realwheelsacc.com)  
[info@realwheelsacc.com](mailto:info@realwheelsacc.com) • toll-free 1-800-982-1180

Hummer and H2 are registered trademarks of General Motors Corporation and are used for identification purposes only. RealWheels Cover Company, Inc. and its products are not affiliated with General Motors Corporation products.