



STAINLESS STEEL UPPER SIDE TUBE FACADE FOR THE HUMMER H2

IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

Note: 3 Primer Sticks per side are needed (included)

Time to install both sides: Approx. 25 Minutes



STEP 1

STEP 1. Clean the area where the Upper Side Tube Facade is to be installed. This step is **extremely important**—If the area where the Upper Side Tube Facade is to be installed is not clean and dry, the trim accessory piece will not stick in place. Begin by cleaning the area thoroughly with a good non-residue cleaner such as Windex, or just clean thoroughly with soap and water and dry completely. **Note:** Do **not** use the 3M Tape Primer as a cleaner.



STEP 2

STEP 2. Prime only the area where the Upper Side Tube Facade is to be installed. After the area is completely cleaned and dry, you must then coat this area with 3M Tape Primer 94 (included). Thoroughly coat the cleaned area where the Upper Side Tube Facade is to be installed with the Primer 94 and wait 5 minutes before installing the Upper Side Tube Facade.



STEP 3

STEP 3. Position Upper Side Tube Facade. Before removing any heavy duty 3M Tape backing from the Upper Side Tube Facade, loosely place it in position on the Hummer to verify how it will fit. Make sure the part fits side-to-side and top-to-bottom.



STEP 4

STEP 4. Adhere Upper Side Tube Facade. Peel off all the paper from the double sided tape on the back of the Upper Side Tube Facade. Carefully place the Upper Side Tube Facade in position. Push and hold firmly for a few seconds. Repeat for the other side.



YOU'RE FINISHED!

You're finished. (Note: Above photo shown with our Stainless Steel Side Rocker Panel. Model Number: RW116-1)



STAINLESS STEEL SIDE STEPS FOR THE HUMMER H2

IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

Tools Needed: 15mm and 9/16" sockets/box end wrenches, wiring tools (if applicable). **Time to install both sides: Approx. 40-70 Min.**

Note: These instructions apply to all models (Straight or bent, with or without back plates or LED Lights).

Note: Installation requires two people.

Note: See other side for Upper Tube Facade Installation.



STEP 1

STEP 1. If your H2 has factory side steps they will need to be removed. While one person supports the factory side step, the other person using a 15mm socket and box end wrench removes the eight factory bolts, located under the rocker panel bar. (See photo above.)



STEP 2

STEP 2. Place the new stainless steel tube side step in position. **Note:** All RealWheels tube side steps attach the same way as the factory side steps do. (See photo above.)



STEP 3

STEP 3. While one person supports the stainless steel tube side step, the other person lines up the holes in the stainless steel mounting brackets with the holes in the Hummer. (See photo above.)




STEP 4

STEP 4. While one person supports the stainless steel tube side step, the other person installs the eight 3/8" bolts, flat washers and Keps nuts. Loosely tighten the bolts. (See photo above.)



STEP 5

STEP 5. With all the bolts/nuts installed, use level on the side step to be sure that the stainless steel tube side step is level. **Note:** Make sure that the Hummer is parked on a level surface. Adjust and tighten the bolts as needed. (See photo above.)

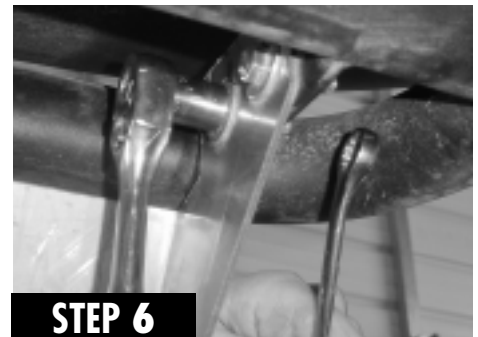

STEP 6

STEP 6. Once you have the side step level, securely tighten all eight bolts. (See photo above.)



STEP 7

STEP 7. If your new stainless steel tube side steps have LED lights. Connect the single black wire to the nearest marker light circuit. Photo at left shows the single black wire that will connect to the marker light circuit.



YOU'RE FINISHED!

RealWheels Cover Company, Inc. • 3940 Tannahill Drive • Gurnee, IL 60031

847-662-7722 • Fax 847-662-7744 • www.realwheelsacc.com • info@realwheelsacc.com • toll-free 1-800-982-1180

Hummer and H2 are registered trademarks of General Motors Corporation and are used for identification purposes only. RealWheels Cover Company, Inc. and its products are not affiliated with General Motors Corporation products.