


## **STAINLESS STEEL FRONT AND REAR TOW HOOKS FOR THE HUMMER H2**


IMPORTANT: Read And Understand All Instructions Before Installation • QUESTIONS? CALL 1-800-982-1180

## Tools Needed: 15mm and 17mm wrench/socket

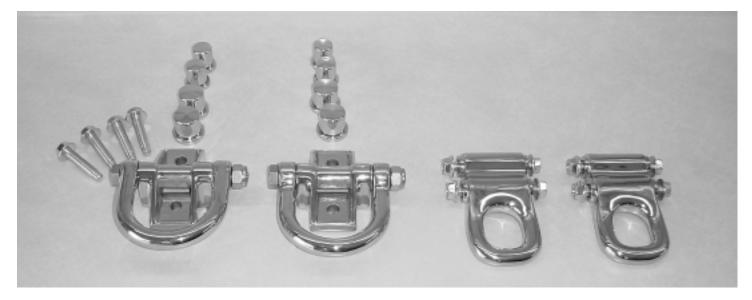




**STEP 1.** Using a 15mm socket, Remove the 8 bolts from the skip plate. (See photo above.)

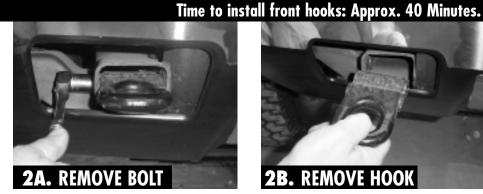

**STEP 2.** Remove the factory tow hook bolts and remove the tow hooks. (See photos above.)



**STEP 3.** Insert the stainless steel tow hooks into the tow hook mounts. (See photo above.)

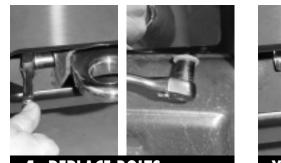

**REPLACE BOLTS** 

STEP 4. Insert the two new bolts into the sides of the tow hook mounts and thread them into the tow hook. Then securely tighten them. Next reinstall the skid plate and retighten all the bolts. (See photos above.)



**2B.** REMOVE HOOK

See backside for Rear Tow Hook Installation.

## **Rear Tow Hooks**

## Time to install rear hooks: Approx. 30 Minutes



**STEP 1.** Using a 17 mm socket remove the two bolts from the factory tow hooks and remove the tow hook. (See photos above.)



**STEP 2.** Place the two stainless steel rectangular washers onto the tow hook and insert the two new tow hook bolts. (See photo above.)



**STEP 3.** Securely tighten the new tow hooks. (See photo above.)



**4.** INSTALL BOLT COVERS

**STEP 4.** Next install the chrome plated bolt covers. **Note:** For extra holding of some of the bolt covers, it may be necessary to place some silicon into the bolt covers before installing. (See photos above.)





**REALWHEELS COVER COMPANY, INC.** 

3940 Tannahill Drive • Gurnee, IL 60031 847-662-7722 • Fax 847-662-7744 • www.realwheelsacc.com info@realwheelsacc.com • **toll-free 1-800-982-1180** 

Hummer and H2 are registered trademarks of General Motors Corporation and are used for identification purposes only. RealWheels Cover Company, Inc. and its products are not affiliated with General Motors Corporation products.